




# SWORDTAIL

## UPRIGHT BASS SYSTEM


Each pre-amp has been voiced for the acoustic properties of an Upright Bass.

Passive/Active Switch  
*(Defaults to input #1 when passive)*

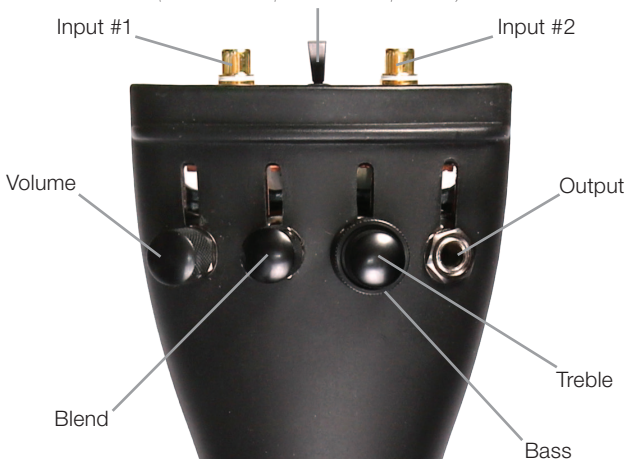



## BATTERY INSTRUCTIONS

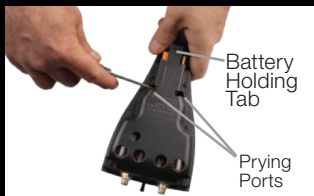

Uses (1) 9-Volt Battery. If battery sticks, gently pry loose by inserting a screw driver through prying ports.

To prolong battery life, unplug 1/4" cable from output jack when not in use.