


Each pre-amp has been voiced for the acoustic properties of a Violin.

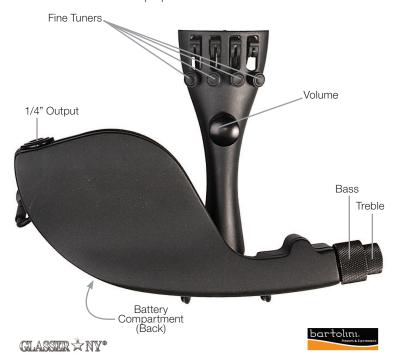



## **BATTERY INSTRUCTIONS**





Uses (2) AA Batteries To prolong battery life, unplug 1/4" cable from output jack when not in use.



GLASSER ★ NY®

